


Quick Installation Guide

Auto Flow Control (A.F.C.)


1.

Inregelen
Adjusting
Regulierung
Réglage


1.1

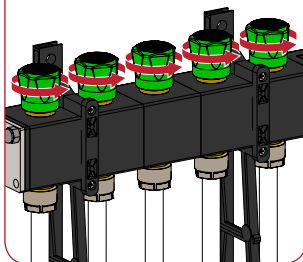


1.2

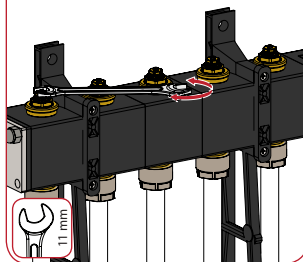

1.3

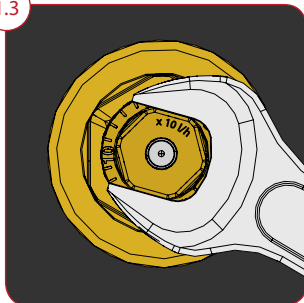


1.4

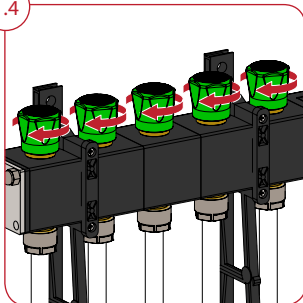


Max. 1x 360° sluiten / Max. 1x 360° close /
Max. 1x 360° schließen / Max. 1x 360° fermer


1.5

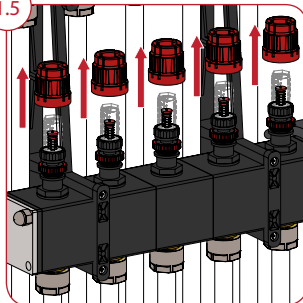

1.6

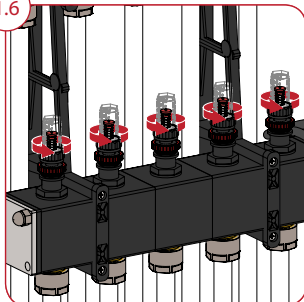

1.7

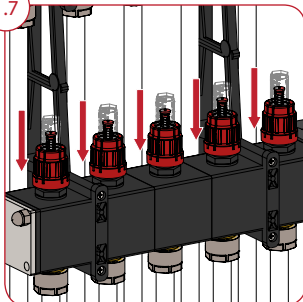

Flowmeters 100% openen / Open flow meters 100% /
Durchflussmesser 100% öffnen / Débitmètres
ouverts 100%





Quick Installation Guide

Auto Flow Control (A.F.C.)



2.

Zonemotoren
Thermal Actuators
Stellantriebe
Actuateurs

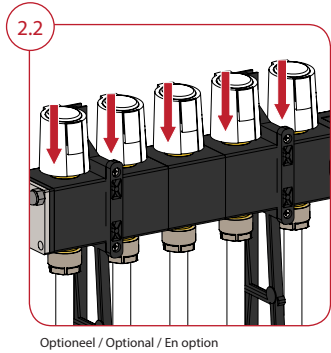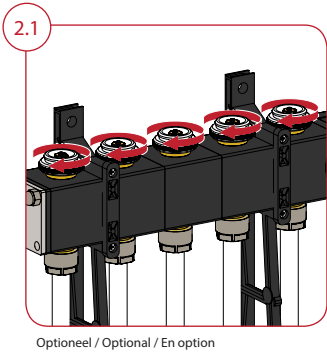

	1				5				9
L/H	10	20	30	40	50	60	70	80	90

				13				17
L/H	100	110	120	130	140	150	160	170

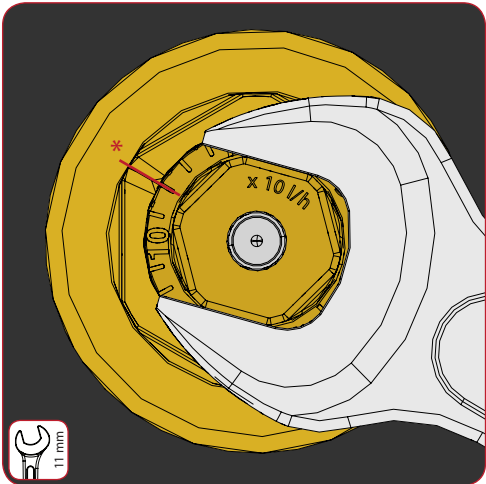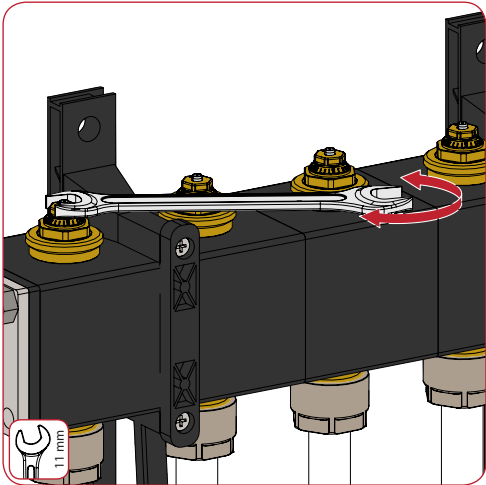

* Ingestelde waarde / Set value / Der eingestellte Wert / La valeur de consigne